

## Alarm messages

All alarm messages that should be sent by an alarm must first be created in the alarm settings. Then they can be selected as actions in the alarm configuration.

To manage the messages, go to Settings → Alarm and tap Messages. Tap Add to add new messages or select a message to edit or delete.

Define the type of message (push or email), choose the recipient and enter a text. Enter a name and save the settings.

From:

<http://doku.mediola.com/> - **Dokumentationen**

Permanent link:

[http://doku.mediola.com/doku.php?id=en:iqontrol\\_neo:alarm\\_nachrichten](http://doku.mediola.com/doku.php?id=en:iqontrol_neo:alarm_nachrichten)

Last update: **2020/07/20 17:06**

